Print on plain white paper - Part # 122919

NOTE: REPLACE EACH PIN ONE AT A TIME.

CAUTION: REMOVE BULB BEFORE PROCEEDING

1. MOVE COUNTERBALANCE ARM TO THE "UP" POSITION.

2. REMOVE THE SHORT PIN.

3. OPEN UP THE HOLE BY DRILLING THRU THE SWIVEL KNUCKLE AND THE TIE BLOCK USING THE 7/32" DRILL BIT PROVIDED.

3. INSERT THE NEW SHORT PIN (PT# 121586) INTO THE HOLE AND PRESS FLUSH TO LOCK IN PLACE.

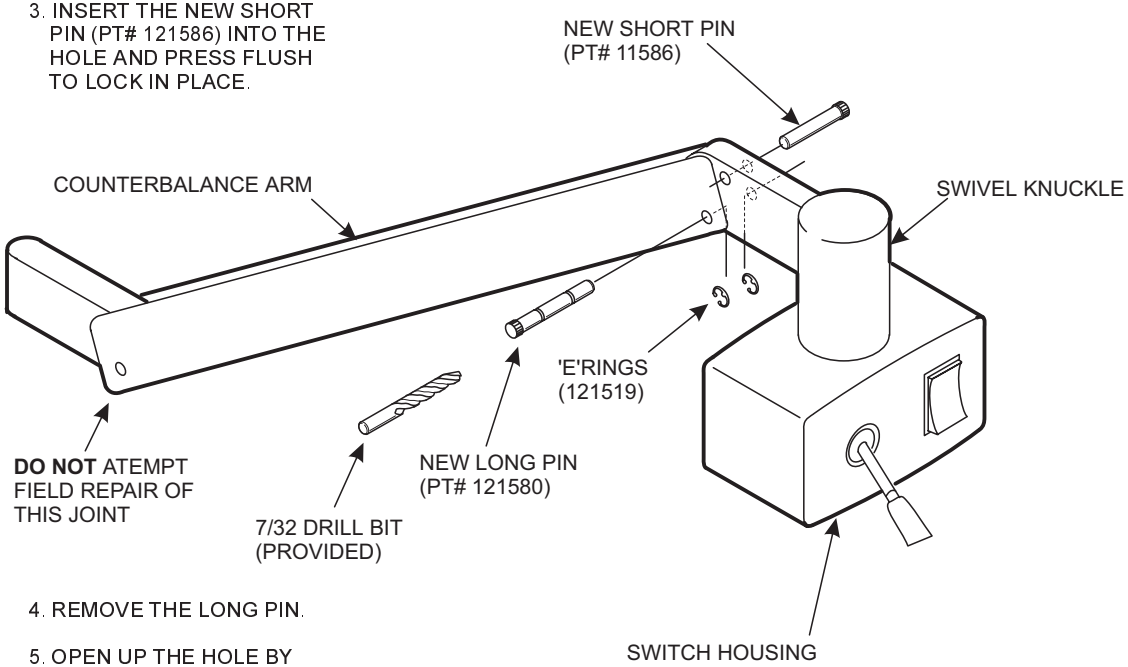

4. REMOVE THE LONG PIN.

5. OPEN UP THE HOLE BY DRILLING THRU THE COUNTERBALANCE ARM AND THE SWIVEL KNUCKLE USING THE 7/32" DRILL BIT PROVIDED.

6. INSERT THE NEW LONG PIN (PT# 121580) INTO THE HOLE AND PRESS FLUSH TO LOCK IN PLACE.

7. INSTALL THE TWO 'E' RINGS (121519) ONTO THE NEW LONG PIN.

INSTRUCTIONS
FOR
MODEL K LIGHT
ARM REPAIR KIT # 152547

TPW1394 Rev. B (1-22-96)

Knight® by Midmark

Midmark Corporation • P O Box 286 • 60 Vista Drive
Versailles • Ohio • 45380-0286 • www.midmark.com
Phone: 937-526-3662 Fax: 937-526-5542